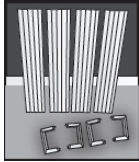
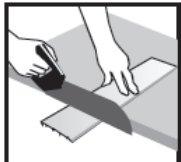

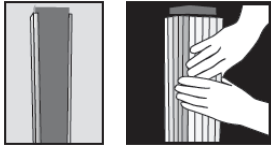
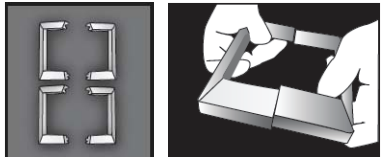
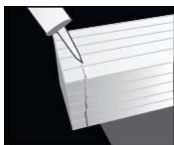
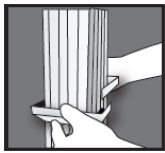
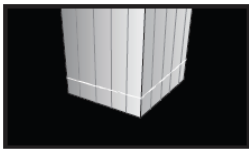
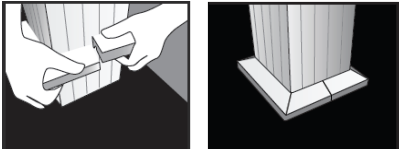


Vinyl Post Wrap

INSTALLATION INSTRUCTIONS



<p><i>Note: This post wrap kit comes with four panels 108" long and with four trim moldings that snap together. The completed assembly will cover an existing post and provide a trim molding for the top and bottom.</i></p>	
<p>1. Measure post to be wrapped and cut the post wrap panels to the required finished length.</p>	
<p>2. Apply FRP adhesive to the male side of interlocking post wrap panels and snap together three panels by hand. <i>Note: Join panels by starting at one end and rolling the seams together.</i></p>	
<p>3. Place the three assembled panels on the existing post and continue to snap together the remaining panel.</p>	
<p>4. Trim molding to required size.</p>	
<p>5. Place a bead of adhesive about 3/4" to 1" from the top of the completed post wrap on all four sides.</p>	
<p>6. Place the two halves of the trimmed molding on the wrap and snap together just below the bead of glue. Push the molding up dragging across the glue and use tape to hold in place until glue sets.</p>	
<p>7. Place a bead of glue about 3/4" to 1" from the bottom end of the completed post wrap on all four sides.</p>	
<p>8. Place the remaining two halves of the trimmed molding at the bottom and snap together just above the bead of glue. Push the molding down dragging across the glue and allow time to set.</p>	

VINYL POST WRAP